




Fx table

	TAP	-/F1	+/F2	F3
WAVESHAPER (1)	NOT USED	- SELECT ONE OF THE 8 WAVESHAPER	+ SELECT ONE OF THE 8 WAVESHAPER	NOT USED
DELAY	TAP TEMPO	DIVISION (2) 	FEEDBACK (2) FROM 0 TO 100%	FREE CLOCK (2) DELAY TIME
PITCH SHIFTER (3)	NOT USED	NOT USED	NOT USED	NOT USED
STEP FILTER	TAP TEMPO & SELECT THE PLAY MODE WHEN F2 IS LIT UP	WRITE SELECT YOUR POSITION WITH CLOCK MOVE FREQ TO WRITE	RUN SPEED (2) : x1 x2 x4 x8 or x24 PLAY MODE (hit TAP) : fwd, alt, random	NUMBER (2) 2, 3, 4, 6 or 8 STEPS

NB 1 : The CLOCK pot sets the filter attack for the WAVE number 6, 7 and 8 (oscillators). **NB 2 :** Use the CLOCK pot to modify the parameters.

NB 3 : The CLOCK pot select the pitch : - 2 oct, - 1 oct, - 5th, detune, + 3rd m, + 3rd M, + 5th, + 1 oct.

Presets :

To save Presets : Press « **BRAIN** » + « **FILTER** », hold « **BRAIN** » for **2 sec.**
Select your preset number by pressing the switches 1-8 (with brain lit up to select the presets 9-16)

To recall Presets : Press « **BRAIN** » + « **FILTER** ». Select your preset number by pressing the switches 1-8 (with brain lit up to select the presets 9-16)

Snapshots :

To save Snapshots : Press « **BRAIN** » + « **1 TAP** », hold « **BRAIN** » for **2 sec.** Select your snapshot number by pressing the switches 1-8.

To recall Snapshots : Press « **BRAIN** » + « **1 TAP** ». Select your snapshot number by pressing the switches 1-8



Factory presets (Press « **BRAIN** » + « **FILTER** ». Hold « **BRAIN** » or 4 sec)

1	2	3	4	5	6	7	8
LOVE 8	OLD COMPUTER	BITS BENDING	DARK SIDE	NOISE ADDER	STEP FAZOR	RUSTY JAM	DELAY DELay delay
9	10	11	12	13	14	15	16
BROKEN DELAY	CONTINENTAL	NAUTILUS	MIDLINE	DETUNE	BEÇQUEREL	DIRTY LEAD	DIGITAL DUCK

MIDI Menu

Press « **BRAIN** » + « **BYPASS** »

MIDI CHANNEL PRESS switch 1	MIDI FILTERS PRESS switch 2	PRESET DUMPS PRESS switch 3
Select your midi channel by pressing the switches 1-8 (with brain lit up to select the channels 9-16)	SW1-Local Control SW2-Send CC SW3-Receive CC SW4-Receive Clock SW5-Receive PGM SW6-Receive Note	SW1-Send 1 Preset SW2-Send All Presets SW3-Receive 1 Preset SW4-Receive All

Shortcuts :

Press « **1** » + « **2** » = all switches **white**

Press « **1** » + « **3** » = all switches **red**

Press « **1** » + « **4** » = all switches **off**

BYPASS :

OFF : Biscuit inactive

GREEN : Biscuit active, no or moderate input signal

ORANGE : Biscuit active, strong input signal

BRAIN :

OFF : Biscuiting mode

BLUE : FX mode

FILTER :

GREEN : Low-Pass

YELLOW : Band-Pass

ORANGE : High-Pass