

## BOUM USER MANUAL ADDENDUM OTO Machines - January 2024



This document lists all the new features, improvements and bug fixes added since the printed User Manual included in the packaging or available on the OTO website.

---

### BOUM REVISION 1.3 (January 2024)

#### 1. NEW FEATURE :

You can dim the brightness of the 8 switches.  
Press RELEASE switch while powering BOUM on.  
The DATA pot now controls the brightness in 4 steps.  
When you are ok with the brightness, swith BOUM off and on.  
This setting is kept in memory.  
The brightness dim function is not applied on the submenus (Display mode, Local mode, ...), the Preset save mode and the MIDI menu.

#### 2. IMPROVEMENT :


On previous revisions the first displayed preset number after startup was always 1.1, regardless of the last preset loaded or saved before BOUM was turned off.  
The number of the last preset loaded or saved before BOUM was turned off is displayed when you press PRESET after a power up.  
This is useful if you want to know which preset was used before BOUM was turned off.

---

### BOUM REVISION 1.2 (May 2021)

#### 1. NEW FEATURE :

You can choose the noise gate release time between six values.  
This parameter is accessible on the lower line when you press the GATE switch.

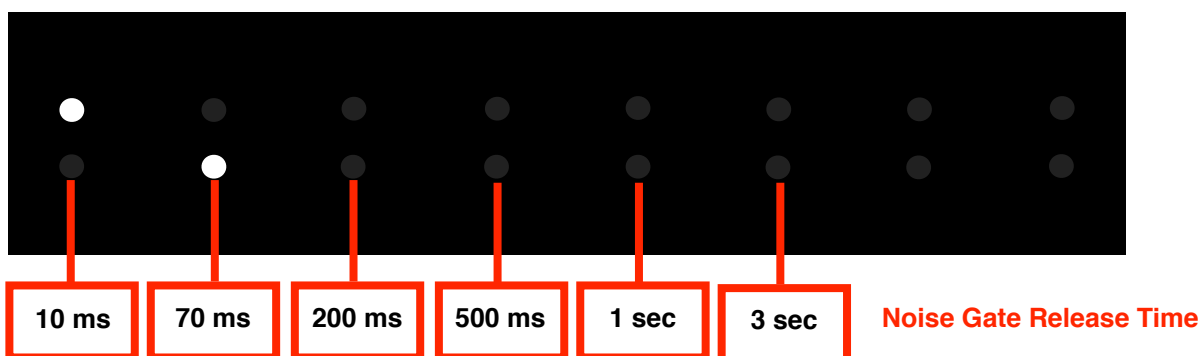

#### BUG FIX :

MIDI CC and PGM CHGE messages were not working well under certain circumstances.