

BOUM UPGRADE INSTRUCTIONS

OTO Machines - January 2024


Please first check the revision already installed on your BOUM :

- 1/ Switch off BOUM.
- 2/ Press RELEASE and LO CUT while powering BOUM on.
- 3/ During 3 seconds, one LED is lit on the upper line and another LED on the lower line.
- 4/ The upper line LED should be 1 and is the first digit of the revision (before the dot).
- 5/ The lower line LED should be 1 or 2 and is the second digit of the revision (after the dot).

For example if the upper LED is 1 and the lower LED is 2, the revision is 1.2.

First digit of the
revision number

Second digit of the
revision number

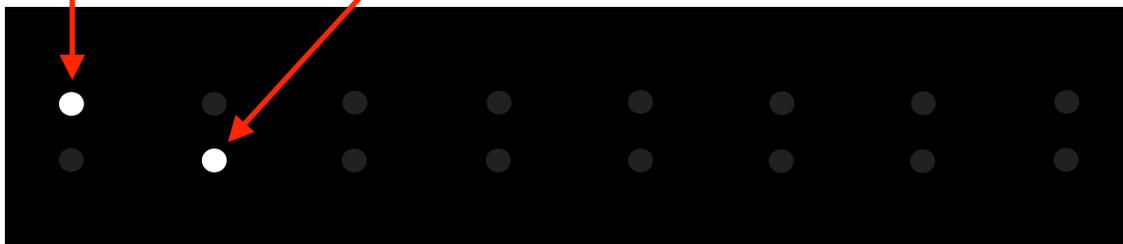

Revision is 1.2

As of January 2024, the latest revision for BOUM is 1.3.

How to upgrade BOUM firmware (Mac) :

1/ Connect a MIDI cable between the MIDI out port of your MIDI interface and the BOUM's MIDI input.

2/ Download the SysEx file **BOUM_rev_X.X.syx** from our website :
<http://www.otomachines.com/support/>

3/ Download and install freeware SysEx utility **SysEx Librarian** from this address :
<http://www.snoize.com/SysExLibrarian/>

You can also use a DAW that have the possibility to send SysEx files. In that case, go to **8**.

4/ Move or copy the **BOUM_rev_X.X.syx** file into the « SysEx Librarian » folder (in your « Documents » folder).

5/ Double-click on the **BOUM_rev_X.X.syx** file. **SysEx Librarian** will open.

6/ Verify that your MIDI interface is displayed on the upper field, near the **Play** button. If not, select your MIDI interface.

7/ Go to **SysEx Librarian** then **Preferences....**

Set **Pause between played messages** to 1 second and

SysEx receive timeout to 1 second.

Close the **Preferences...** menu.

8/ Switch BOUM on while pressing the **ATTACK**, **RELEASE**, **LO CUT** and **DISTO** switches. These 4 switches light up. BOUM is now ready for the upgrade.

9/ Select the **BOUM_rev_X.X.syx** file in the **SysEx Librarian** main screen and press the **Play** button. The following message **Sending message...** is displayed on the SysEx Librarian screen.

If you use a DAW, send the file **BOUM_rev_X.X.syx** to the correct MIDI output port.

10/ LEDs 1 and 9 are lit on the BOUM screen indicating that the firmware upgrade has started. The LEDs on the BOUM screen will display the progress of the firmware upgrade (from LEDs 1 and 9 to the whole 16 LEDs lit up).

BOUM will reset itself and is ready to use.

You can check the revision number by switching BOUM on while pressing the **RELEASE** and **LO CUT** switches.

<p>NOTE : If the update is not successful, try another MIDI interface or decrease the transmit speed (SysEx Librarian → Preferences → Transmit Speed).</p>
--

How to upgrade BOUM firmware (PC) :

1/ Connect a MIDI cable between the MIDI out port of your MIDI interface and the BOUM's MIDI input.

2/ Download the SysEx file **BOUM_rev_X.X.syx** from our website :
<http://www.otomachines.com/support/>

3/ Download and install SysEx utility **MIDI-OX** from this address :
<http://www.midiox.com/>

You can also use a DAW that have the possibility to send SysEx files. In that case, go to 7.

4/ Open the **MIDI-OX** application.

5/ Click **Options** then **MIDI Devices....** Select your MIDI interface on the **MIDI Outputs** box. Your MIDI interface should be highlighted. Click **OK**.

6/ Click **View** then **SysEx....** Go to **Sysex** then **Configure....**
Set **Low Level Output Buffers** to 300 (size) and 19 (Num)
Auto-adjust Buffer... and **Delay After F7** boxes should be unchecked. Click **OK**.

7/ Switch BOUM on while pressing the **ATTACK**, **RELEASE**, **LO CUT** and **DISTO** switches. These 4 switches light up. BOUM is now ready for the upgrade.

8/ On the **SysEx View and Scratchpad** screen, click **File** and **Send SysEx File....**
Select the **BOUM_rev_X.X.syx** file with the opened browser.

MIDI OX is now sending the firmware via SysEx.

If you use a DAW, send the file **BOUM_rev_X.X.syx** to the correct MIDI output port.

9/ LEDs 1 and 9 are lit on the BOUM screen indicating that the firmware upgrade has started. The LEDs on the BOUM screen will display the progress of the firmware upgrade (from LEDs 1 and 9 to the whole 16 LEDs lit up).

BOUM will reset itself and is ready to use.

You can check the revision number by switching BOUM on while pressing the **RELEASE** and **LO CUT** switches.

<p>NOTE : If the update is not successful, try another MIDI interface, or set Low Level Output Buffers to 64 (size) and 2 (Num).</p>
--

BOUM revision Changelog

(NF = New feature, BF = Bug fix, IM = Improvement)

Revision nr	Date	Description of changes
1.2	May 2021	NF : Gate Release Time (lower line on GATE screen) BF : MIDI CC and PGM CHGE were not working well under certain circumstances
1.3	January 2024	NF : The brightness of the 8 switches can be dimmed (4 values) IM : The number of the last preset loaded or saved before switching BIM off is displayed when you press PRESET after a power up